

VERVE Arnold Series

Shoulder Press

Owner's Manual

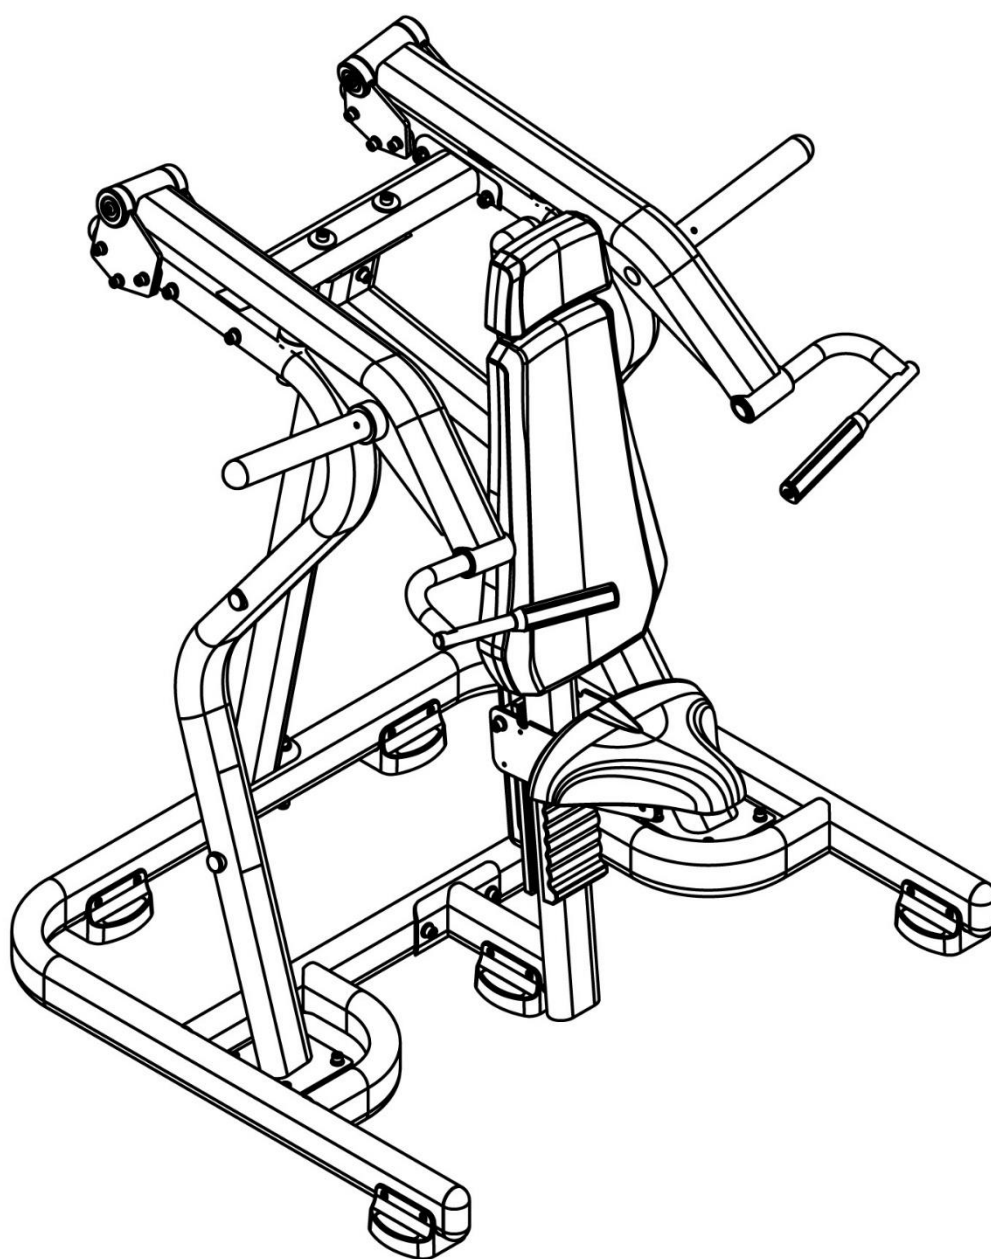


Table Of CONTENTS

Safety Notice	Page 2
Exploded View Diagram	Page 3
Assembly instructions	Page 4 – 9
Part List	Page 10 – 11
Pre-Assembled Components	Page 11
Maintenance	Page 12

IMPORTANT SAFETY NOTICE


PRECAUTIONS:

This exercise machine is built for optimum safety. However, certain precautions apply whenever you operate a piece of exercise equipment. Be sure to read the entire manual before you assemble or operate your machine. In particular, note the following safety precautions:

- **Maximum user weight: 150kg.**
- Keep children and pets away from the machine at all times. DO NOT leave unattended children in the same room with the machine.
- Only one person at a time should use the machine.
- If the user experiences dizziness, nausea, chest pain, or any other abnormal symptoms, STOP the workout at once. CONSULT A PHYSICIAN IMMEDIATELY.
- Position the machine on a clear, level surface. DO NOT use near water or outdoors.
- Keep hands away from all moving parts.
- Always wear appropriate workout clothing when exercising. Do not wear robes or other clothing that could become caught in the machine. Running or aerobic shoes are also required.
- Use the machine only for its intended use as described in this manual. DO NOT use any other accessories not recommended by the manufacturer.
- DO NOT place any sharp objects around the machine.
- Handicapped or disabled persons should not use the machine without the presence of a qualified health professional or physician.
- Before exercising, always stretch first.
- Never operate the machine if it is not functioning properly.
- Please read the instructions carefully before assembling the machine.

WARNING: BEFORE BEGINNING THIS OR ANY EXERCISE PROGRAM, CONSULT YOUR PHYSICIAN FIRST. THIS IS ESPECIALLY IMPORTANT FOR INDIVIDUALS OVER THE AGE OF 35 OR PERSONS WITH PRE-EXISTING HEALTH PROBLEMS. READ ALL INSTRUCTIONS BEFORE USING. WE ASSUME NO RESPONSIBILITY FOR PERSONAL INJURY OR PROPERTY DAMAGE SUSTAINED BY OR THROUGH THE USE OF THIS PRODUCT.

Exploded View Diagram

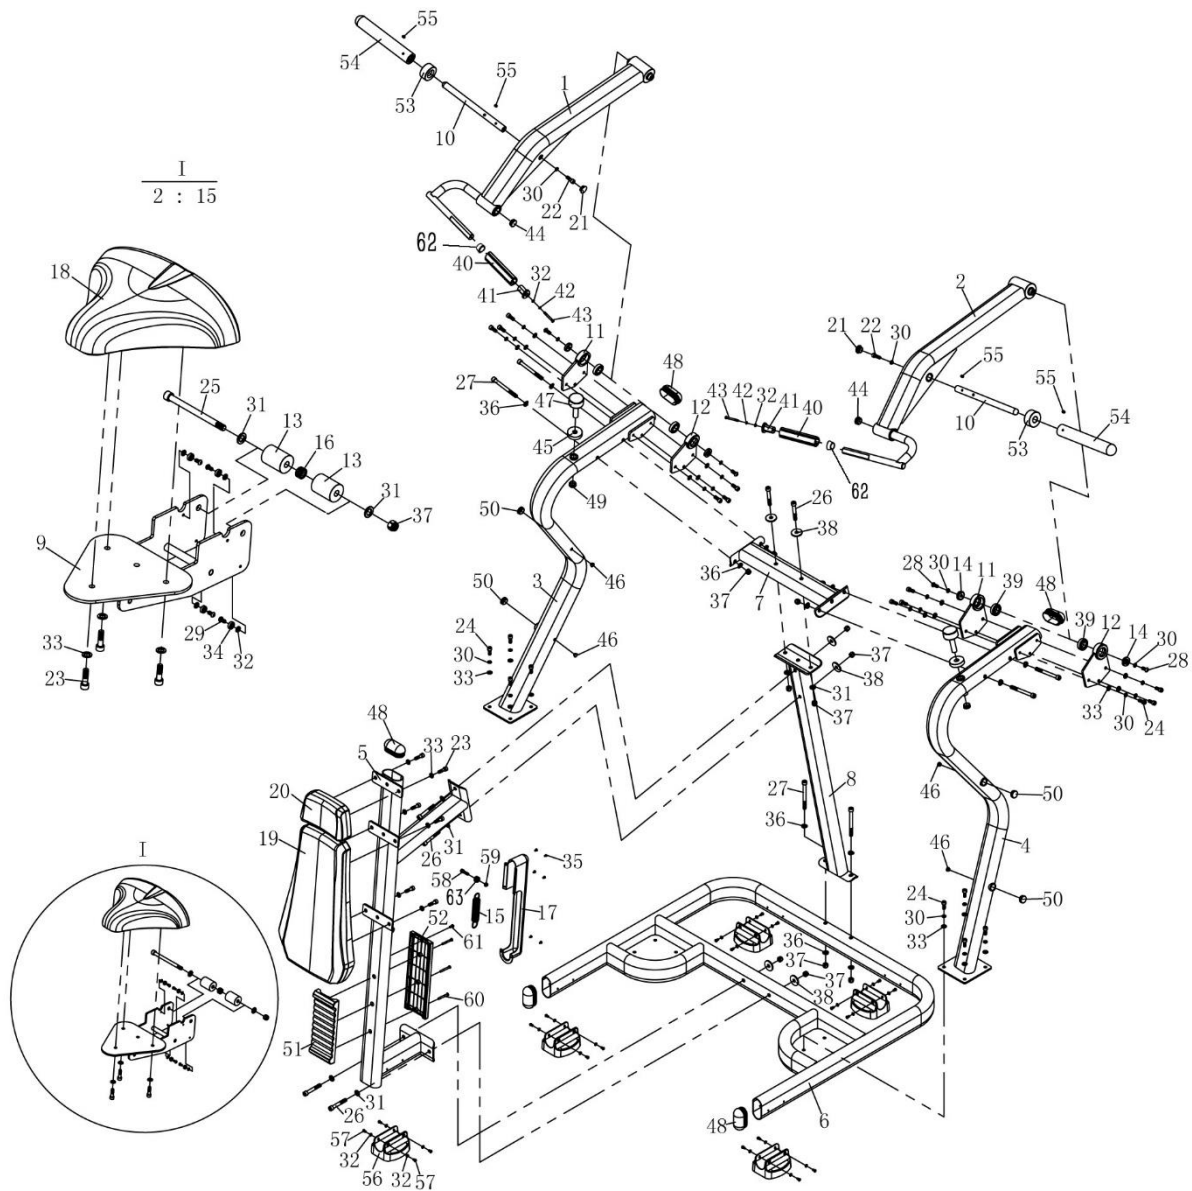


Step 1: Preparation

- 1. A Flat area of Roughly 2 meters will be required to assemble and properly use the machine**
- 2. Please use padding to ensure that your floor or machine isn't damaged during assembly**
- 3. The fastening systems included (Nuts & Bolts) may have a grease coating to protect them from corrosion, have a rag handy**
- 4. ALL Plastic end caps should already be installed on the machine prior to shipping, they are included in the parts list and assembly diagrams to aid you if you need replacement parts**
- 5. This machine uses different lengths of bolts, be careful to use the correct length called for in each step of assembly.**


Step 2

Step 2 Part List					
Item#	Description	Qty.	Item#	Description	Qty.
5	Backrest Frame	1	31	Washer $\Phi 12$	4
6	Bottom Base	1	36	Arc Washer $\Phi 12$	4
8	Rear Support Frame	1	37	Nylon Lock Nut M12	6
26	Hex Recessed Round Head Bolt M12*80	4	38	Extra Large Washer $\Phi 12$	4
27	Hex Recessed Round Head Bolt M12*125	2			

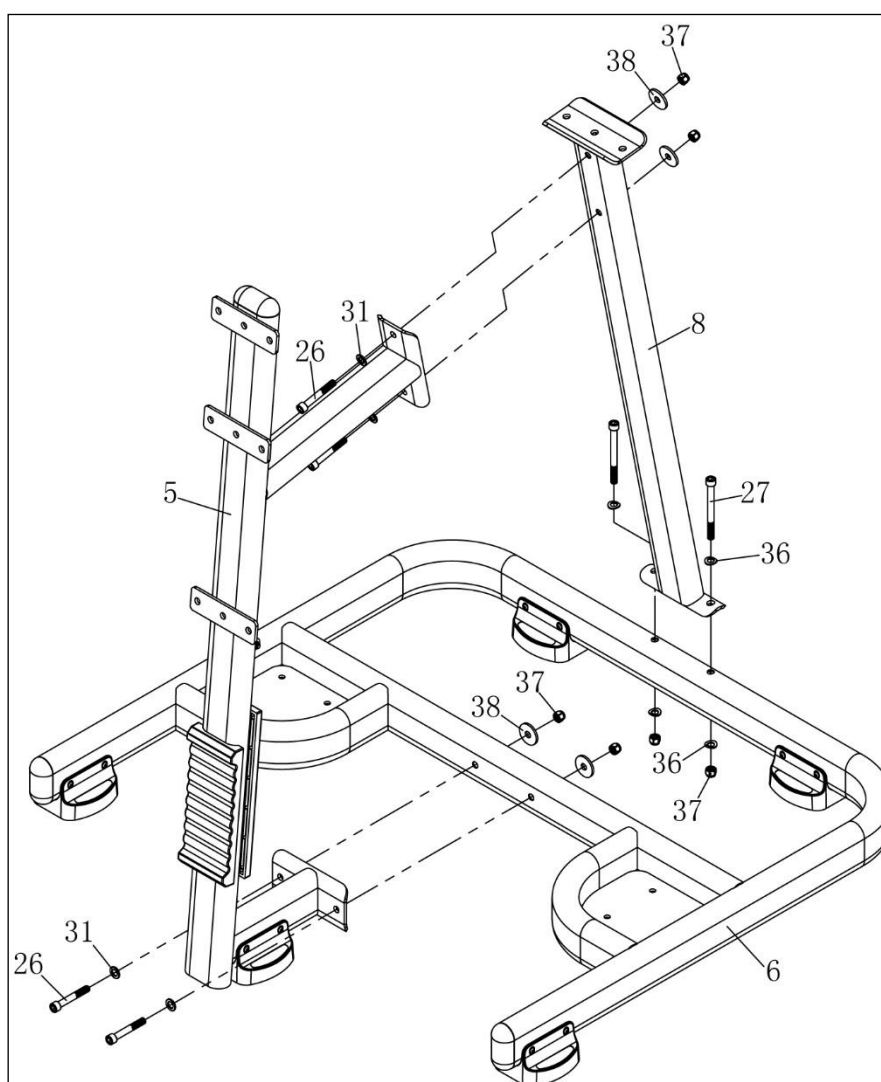


Step 3

Step 3 Part List					
Item#	Description	Qty.	Item#	Description	Qty.
5	Backrest Frame	1	29	Hex Recessed Flat Head Screw M6*12	2
9	Seat Pad Support	1	31	Washer $\Phi 12$	2
13	Wheel	3	32	Washer $\Phi 6$	2
15	Tension Spring	1	34	Deep Groove Ball Bearing with Dust Cover 619-6-2Z	2
16	Lower Spring Base	2	37	Nylon Lock Nut M12	1
25	Hex Recessed Round Head Bolt M12*155	1			

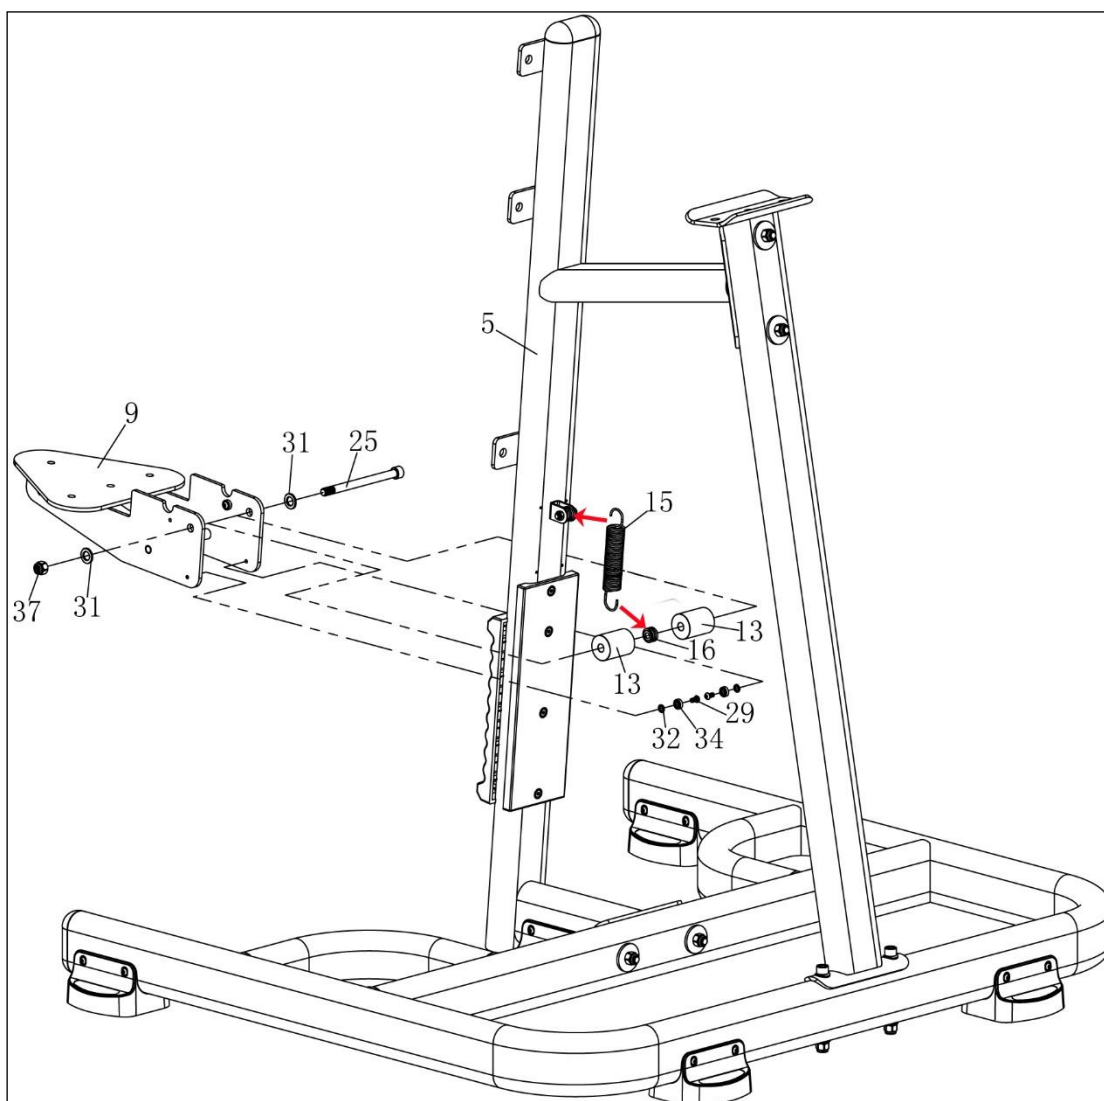


Step 4

Step 4 Part List					
Item#	Description	Qty.	Item#	Description	Qty.
17	Spring Shield	1	35	Cross Pan Head Screw M4*8	6

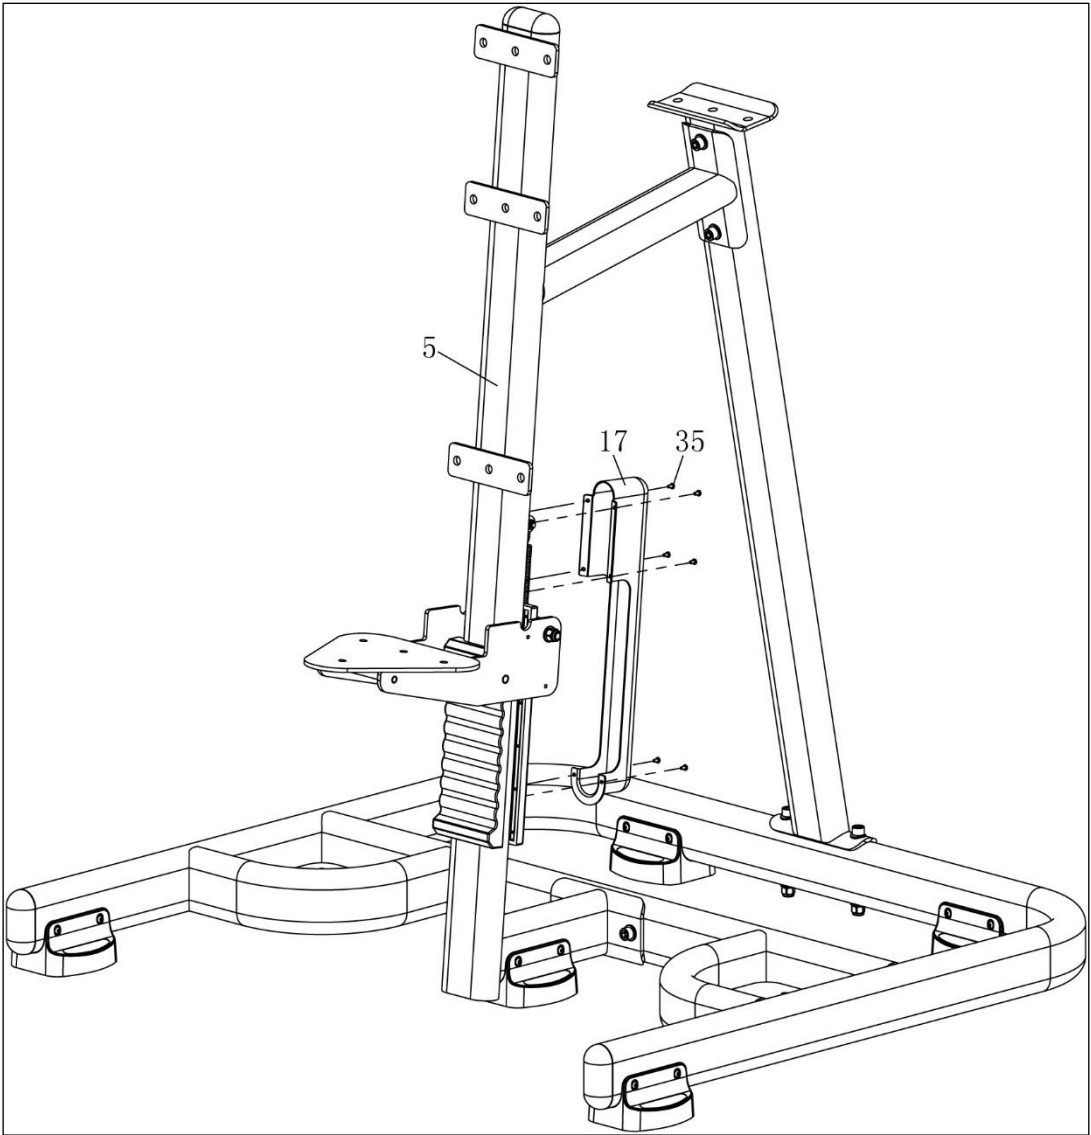


Step 5

Step 5 Part List					
Item#	Description	Qty.	Item#	Description	Qty.
3	Right Support Frame	1	30	Spring Washer $\Phi 10$	8
4	Left Support Frame	1	31	Washer $\Phi 12$	2
6	Bottom Base	1	33	Washer $\Phi 10$	8
7	Top Connecting Frame	1	36	Arc Washer $\Phi 12$	8
24	Hex Recessed Round Head Bolt M10*25	8	37	Nylon Lock Nut M12	6
26	Hex Recessed Round Head Bolt M12*80	2	38	Extra Large Washer $\Phi 12$	2
27	Hex Recessed Round Head Bolt M12*125	4			

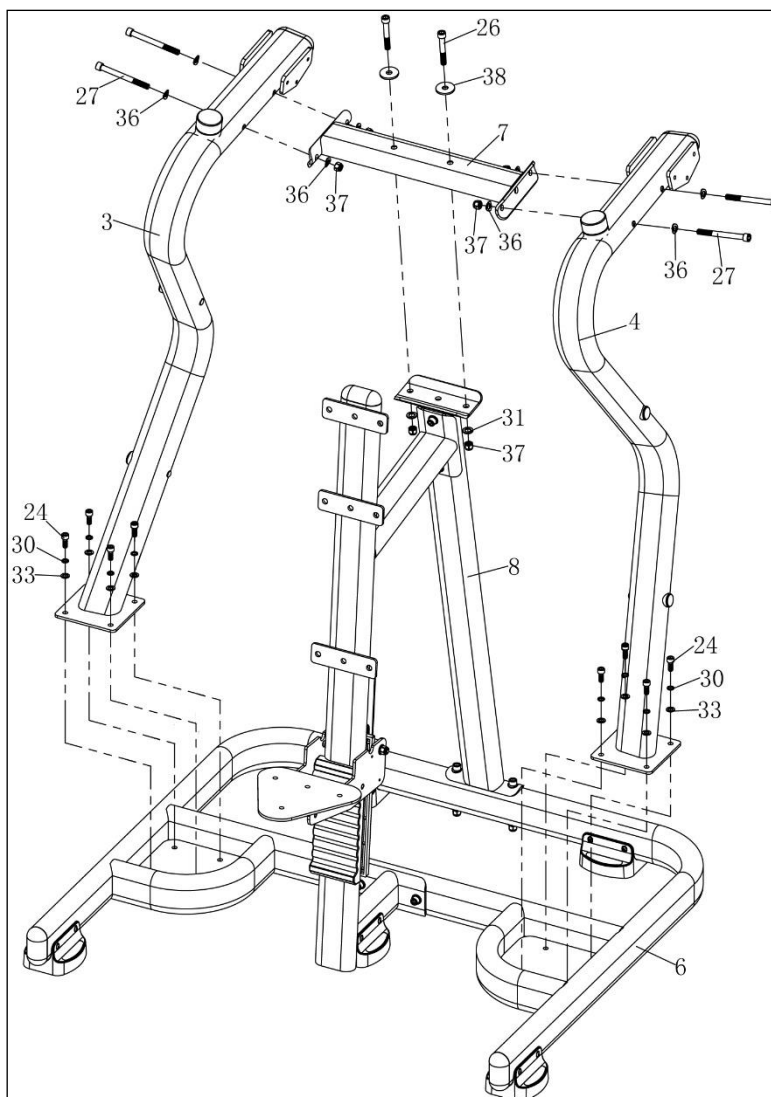


Step 6

Step 6 Part List					
Item#	Description	Qty.	Item#	Description	Qty.
10	Weight Plate Pole	2	22	Hex Recessed Round Head Bolt M10*30	2
11	Bearing Base 1	1	24	Hex Recessed Round Head Bolt M10*25	6
12	Bearing Base 2	1	28	Hex Recessed Flat Head Screw M10*25	2
14	Bearing Shim	2	30	Spring Washer $\Phi 10$	10
21	Big Ball Head Round Plug $\Phi 25 \times \delta 2 \times \Phi 32$	2	33	Washer $\Phi 10$	6

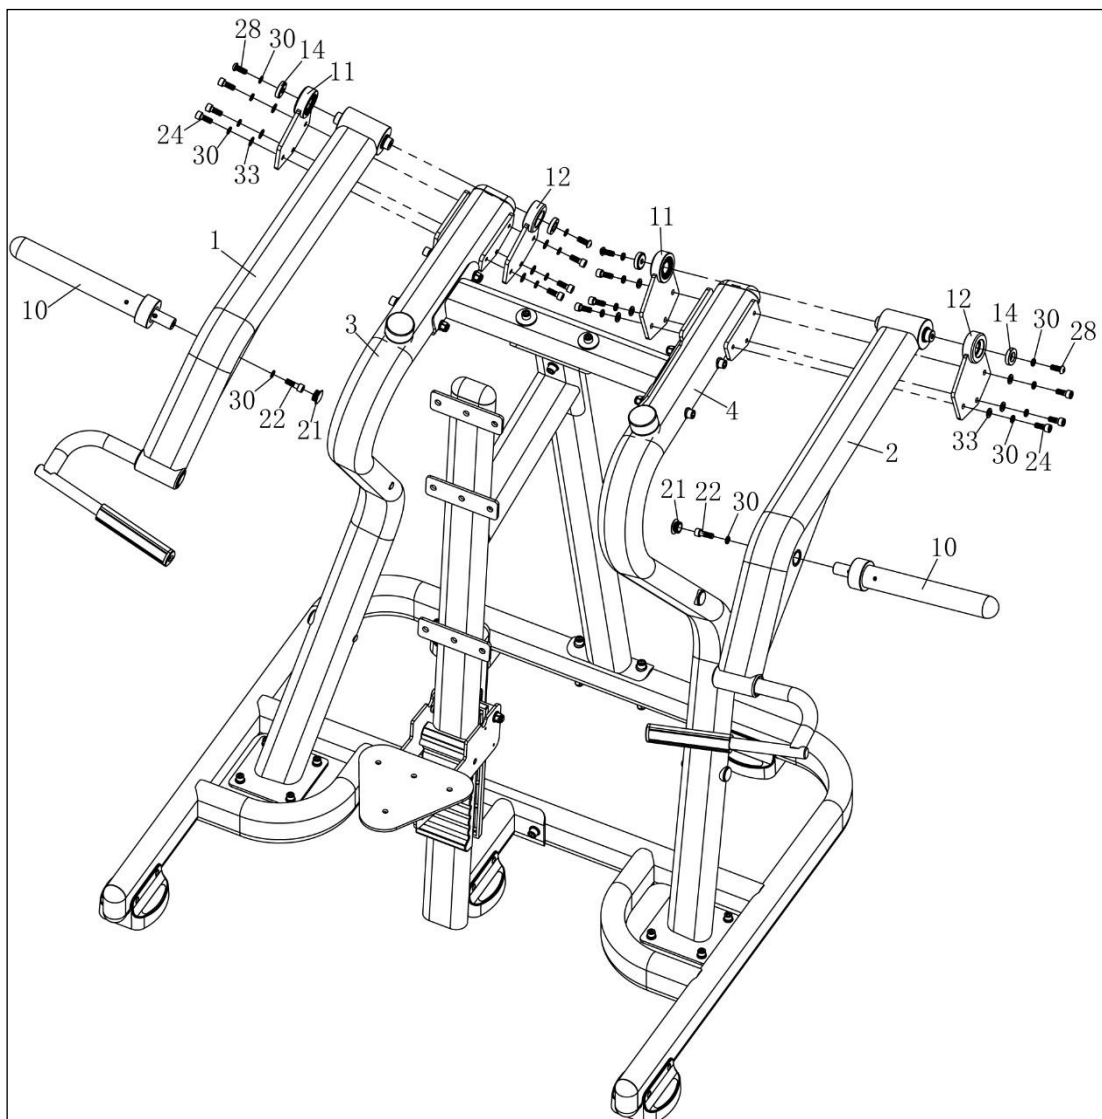

Step 7

Step 5 Part List					
Item#	Description	Qty.	Item#	Description	Qty.
2	Left Press Arm	1	19	Backrest	1
9	Seat Pad Support	1	23	Hex Recessed Round Head Bolt M10*35	9
18	Seat Pad	1	33	Washer $\Phi 10$	9

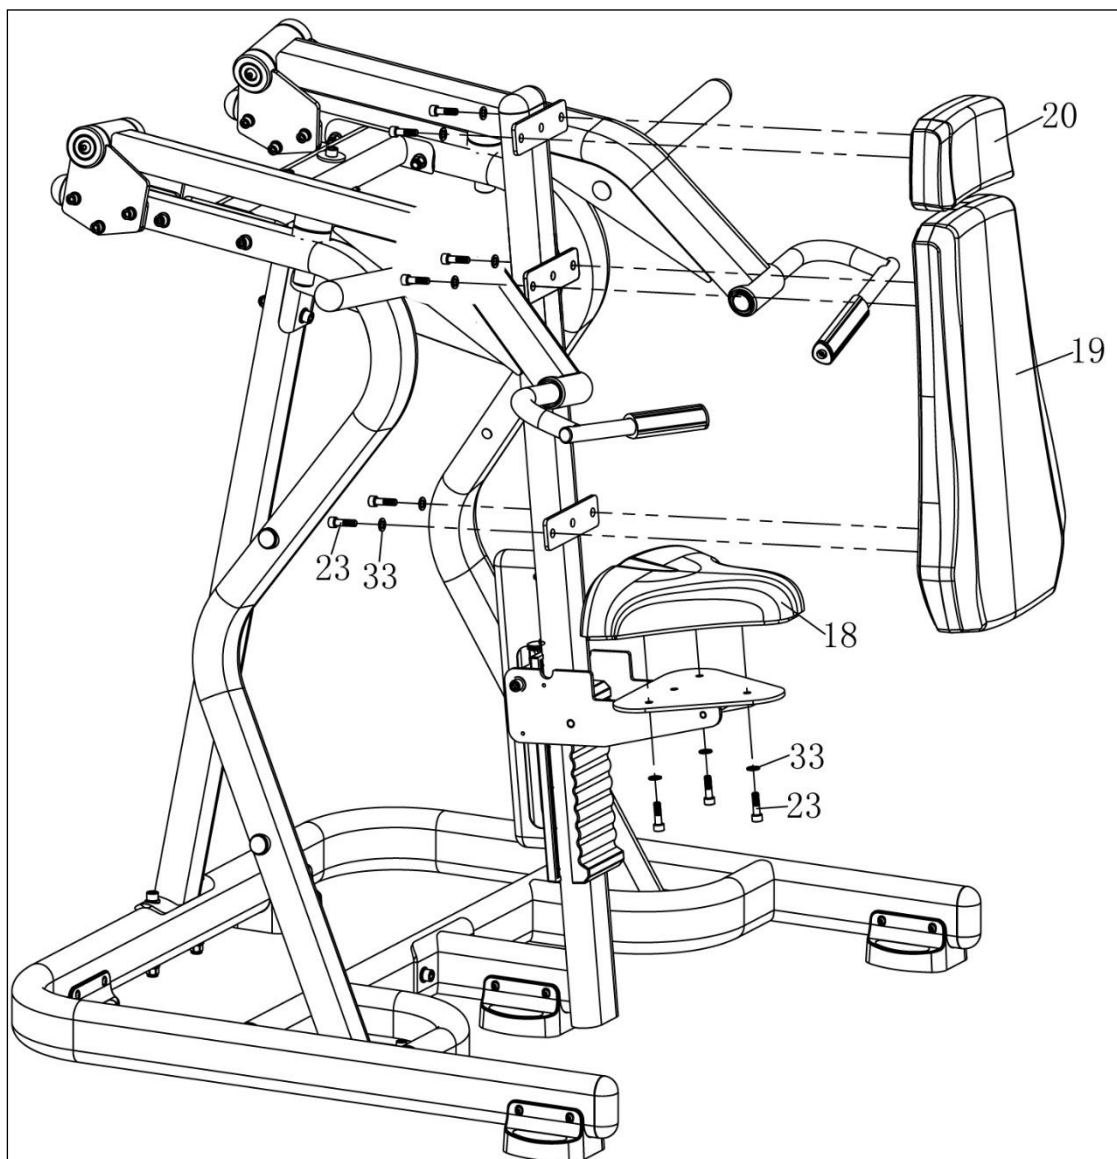

Parts List

Item #	Description	Qty.	Item #	Description	Qty.
1	Right Press Arm	1	27	Hex Recessed Round Head Bolt M12*125	6
2	Left Press Arm	1	28	Hex Recessed Flat Head Screw M10*25	4
3	Right Support Frame	1	29	Hex Recessed Flat Head Screw M6*12 (resistance to fall)	4
4	Left Support Frame	1	30	Spring Washer $\Phi 10$	26
5	Backrest Frame	1	31	Washer $\Phi 12$	8
6	Bottom Base	1	32	Washer $\Phi 6$	26
7	Top Connecting Frame	1	33	Washer $\Phi 10$	29
8	Rear Support Frame	1	34	Deep Groove Ball Bearing with Dust Cover 619-6-2Z	4
9	Seat Pad Support	1	35	Cross Pan Head Screw M4*8	6
10	Weight Plate Pole	2	36	Arc Washer $\Phi 12$	12
11	Bearing Base 1	2	37	Nylon Lock Nut M12	13
12	Bearing Base 2	2	38	Extra Large Washer $\Phi 12$	6
13	Wheel	2	39	Deep Groove Ball Bearing with Dust Cover 6005-2Z	4
14	Bearing Shim	4	40	Aluminum Handle	2
15	Tension Spring	1	41	Handle End Cover	2
16	Lower Spring Base	1	42	Spring Washer $\Phi 6$	2
17	Spring Shield	1	43	Hex Recessed Flat Head Screw M6*60	2
18	Seat Pad	1	44	Round Plug $\Phi 30$	2
19	Backrest	1	45	Lock Plate	2
20	Headrest	1	46	Hole Plug	4
21	Big Ball Head Round Plug $\Phi 25 \times \delta 2 \times \Phi 32$	2	47	Adjustable Cushion	2
22	Hex Recessed Round Head Bolt M10*30	2	48	Elliptical Plug PT100*50* $\delta 2.5$	5
23	Hex Recessed Round Head Bolt M10*35	9	49	Round Plug $\Phi 28$	2
24	Hex Recessed Round Head Bolt M10*25	20	50	Round Plug $\Phi 30$	4

VERVE Arnold Series Shoulder Press Machine
VER-ARN-Z04



25	Hex Recessed Round Head Bolt M12*155	1	51	Front Support Board	1
26	Hex Recessed Round Head Bolt M12*80	6	52	Rear Support Board	1

Item #	Description	Qty.	Item #	Description	Qty.
53	Rubber Cushion	2	59	Nylon Lock Nut M8	1
54	Weight Plate Pole Sleeve	2	60	Hex Socket Countersunk Head Screw M6*55	3
55	Hex Socket Set Screw with Cup Point M8*10	4	61	Hex Socket Countersunk Head Screw M6*16	1
56	Big Foot Pad	5	62	Bushing	2
57	Hex Recessed Flat Head Screw M6*12	20	63	Upper Spring Base	1
58	Hex Recessed Round Head Bolt M8*30	1			

MAINTENANCE

1. Lubrication of all moving parts is essential to the longevity and optimal performance of your Machine.

Note: Do not use oil-based lubricants as they will attract dust, dirt and grime, and will eventually gum up and erode bushings and sealed bearings.

2. All bushings should be checked regularly for signs of wear.
3. Check and adjust cable tension periodically as it will maintain proper anatomical function.
4. Periodically check all moving parts, upholstery and grips for signs of wear or damage. If there is a problem or replacement part which is necessary, STOP USING THE EQUIPMENT and immediately contact your local retailer. Replace parts using only genuine parts.
5. As needed, upholstery may be cleaned with a mild solution of soap and water. Regular use of a vinyl treatment will add to the life and appearance of your upholstery.
6. All chrome plated surfaces should be cleaned regularly to prolong the life and lustre of the finish. Wipe machine down with a damp cloth and dry thoroughly each day. At least once a week your chrome equipment should be polished with a commercial grade or automotive type chrome polish.
7. When checking the bolts and nuts, be sure they are all fully fastened. If there is a bolt or nut that continuously loosens obtain a replacement through your local retailer.
8. Check welds to be free of cracks.

Failure to perform routine maintenance could result in personal injury and/or equipment damage.

