

R60

Commercial Fitness Bike




R60 ASSEMBLY GUIDE




ASSEMBLY GUIDE

TOOLS & PARTS INCLUDED

1.5mm Pedal Wrench

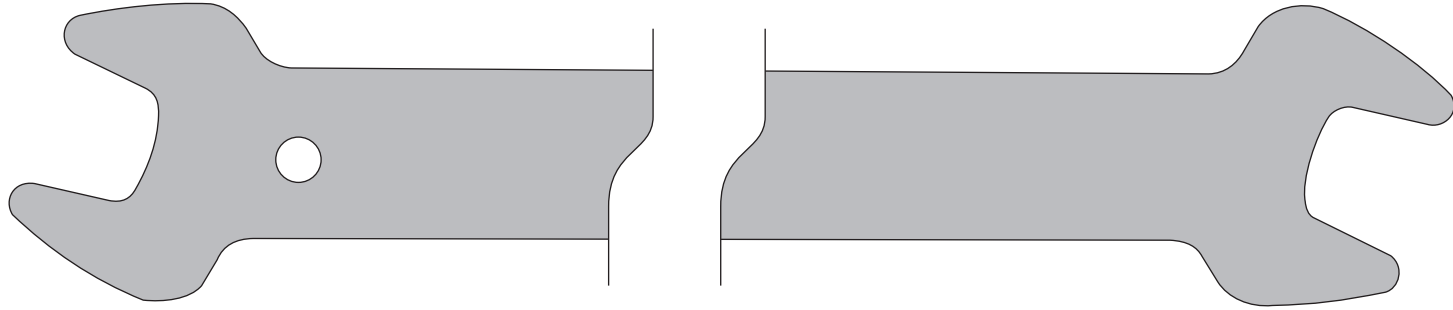


6mm L-Shaped Wrench

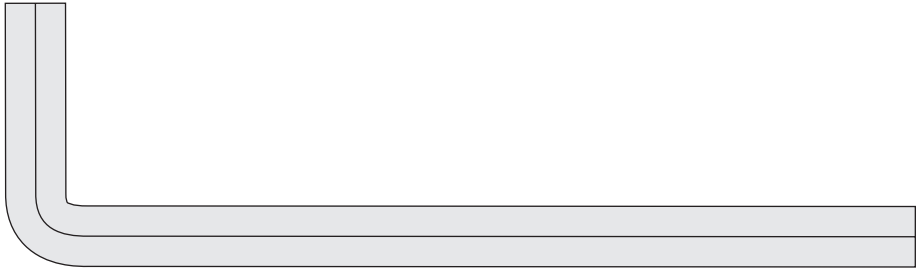


4mm L-Shaped Wrench



5mm L-Shaped Wrench

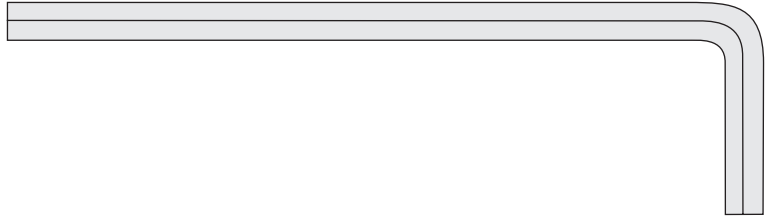

Screwdriver

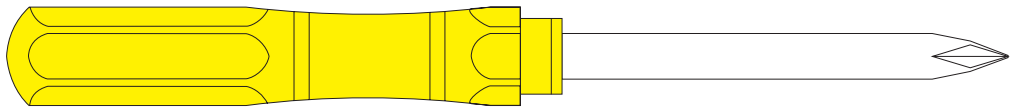


PARTS BOX

- Console Mast Boot
- Color-coded Hardware Bags
- Pedals/Straps
- Owner's Guide
- Assembly Guide
- Warranty Card


HARDWARE INCLUDED

ORANGE BAG

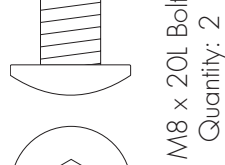


M8 Lock Washer
Quantity: 4

PURPLE BAG

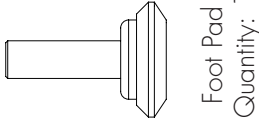


Foot Pad Nut
Quantity: 1

BLUE BAG

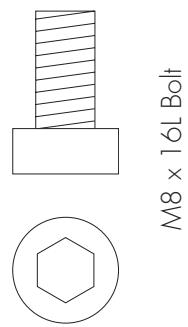


M8 Lock Washer
Quantity: 4

PINK BAG

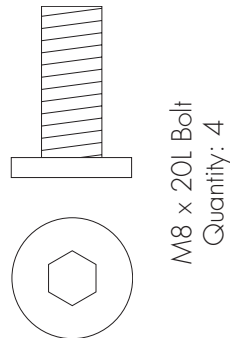


M8 x 20L Bolt
Quantity: 4

GREEN BAG

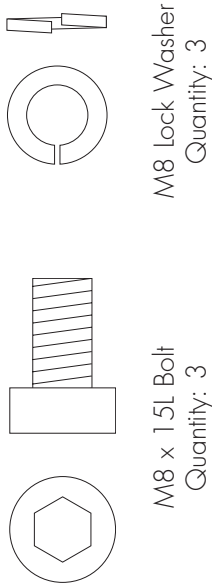


M8 Lock Washer
Quantity: 3

BLACK BAG

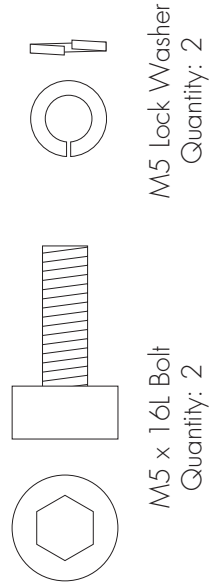

M5 Lock Washer
Quantity: 2

YELLOW BAG

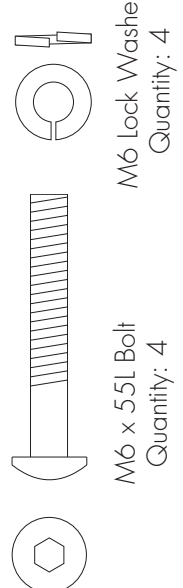


M6 Lock Washer
Quantity: 4

WHITE BAG



M5 x 10L Bolt
Quantity: 2

RED BAG

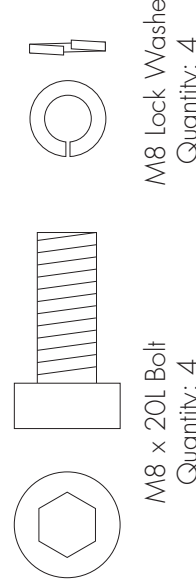

M8 Lock Washer
Quantity: 4

Assembly Guide

R60 COMMERCIAL FITNESS BIKE

To avoid possible damage to this Fitness Bike, please follow these assembly steps in the correct order. Before proceeding, find your new Fitness Bike's serial number located on the front axle tube, and enter here:

Refer to this number when calling for service, and enter this serial number on your Warranty Card and in your own records. Be sure to read your Owner's Guide before using your new Fitness Bike.
If any parts, hardware or tools are missing, please call your local dealer.

NOTE: It is recommended that you apply grease to the threads of each bolt and screw as you assemble your Fitness Bike to prevent loosening and noise. Also, during each assembly step, ensure that ALL screws and bolts are in place and partially threaded in before completely tightening any ONE screw or bolt.

STEP 1 ORANGE BAG

- Install the rear foot with the four lock washers (M8), two inside bolts (M8x65L), and two outside bolts (M8x20L). Tighten with the 5mm L-shape wrench.

STEP 2 PURPLE BAG

- Put Foot Pad through Foot Pad Nut then fix on the frame.

STEP 3 BLUE BAG

- Slide the console mast boot onto the console mast.
- Unfold the wire harness and heart rate wires located in the console mast frame bracket. Attach the wire tie coming from the bottom of the console mast to the wire harness and heart rate wires. Pull the wire tie with wire harness and heart rate wires up through the top of the console mast while simultaneously sliding the mast into the frame bracket.
- Secure the console mast to the frame bracket with preattached four bolts (M8x16L), washers and tighten by 6mm L-shape wrench.
- Slide the console mast boot down and snap it into place on the side cover.

STEP 4 PINK BAG

- Mount the upper handlebars to the console mast using four bolts (M8x20L). Tighten with the 5mm L-shape wrench.

STEP 9

STEP 7

Water Bottle

STEP 8

STEP 4

PINK BAG

- Remove the four mounting screws from the back of the console. Remove the four console back cover screws. Connect the wire harness and heart rate wires that come from the console mast into the plugs located in the back of the console. Attach the console to the mast with the four screws removed earlier.
- Plug in the 9-volt battery. Re-attach the console back cover with the four screws previously removed.

STEP 5

BLACK BAG

- Fix seat position adjuster to the seat slider by two bolts (M5x16L) and lock washers then tightened by 4mm L-shape wrench.

STEP 6

RED BAG

- Fix seat frame to the seat slider by four bolts (M8x20L) with lock washers and tighten by 6mm L-shape wrench.

STEP 7

WHITE BAG

- Secure the Accessory Tray to the seat handlebar with two bolts (M5x10L). Be careful when inserting the bolts to clear the wires inside the handlebar to prevent damage. Tighten with the screwdriver.

STEP 8

GREEN BAG

- Fix handle bar by three bolts (M8x15L) and lock washers (M8) to wire harness from the seat frame and tighten by 6mm L-shaped wrench.

STEP 9

YELLOW BAG

- Fix seat pad on seat frame by four bolts (M6x55L) with lock washers by 4mm L-shape wrench.

Attention: There are eight holes in the neath of seat pad, please follow the drawing of STEP 9 to find the correct position.

STEP 10

PEDAL

- Attach the pedals to crank and tight them by 15mm pedal wrench.

